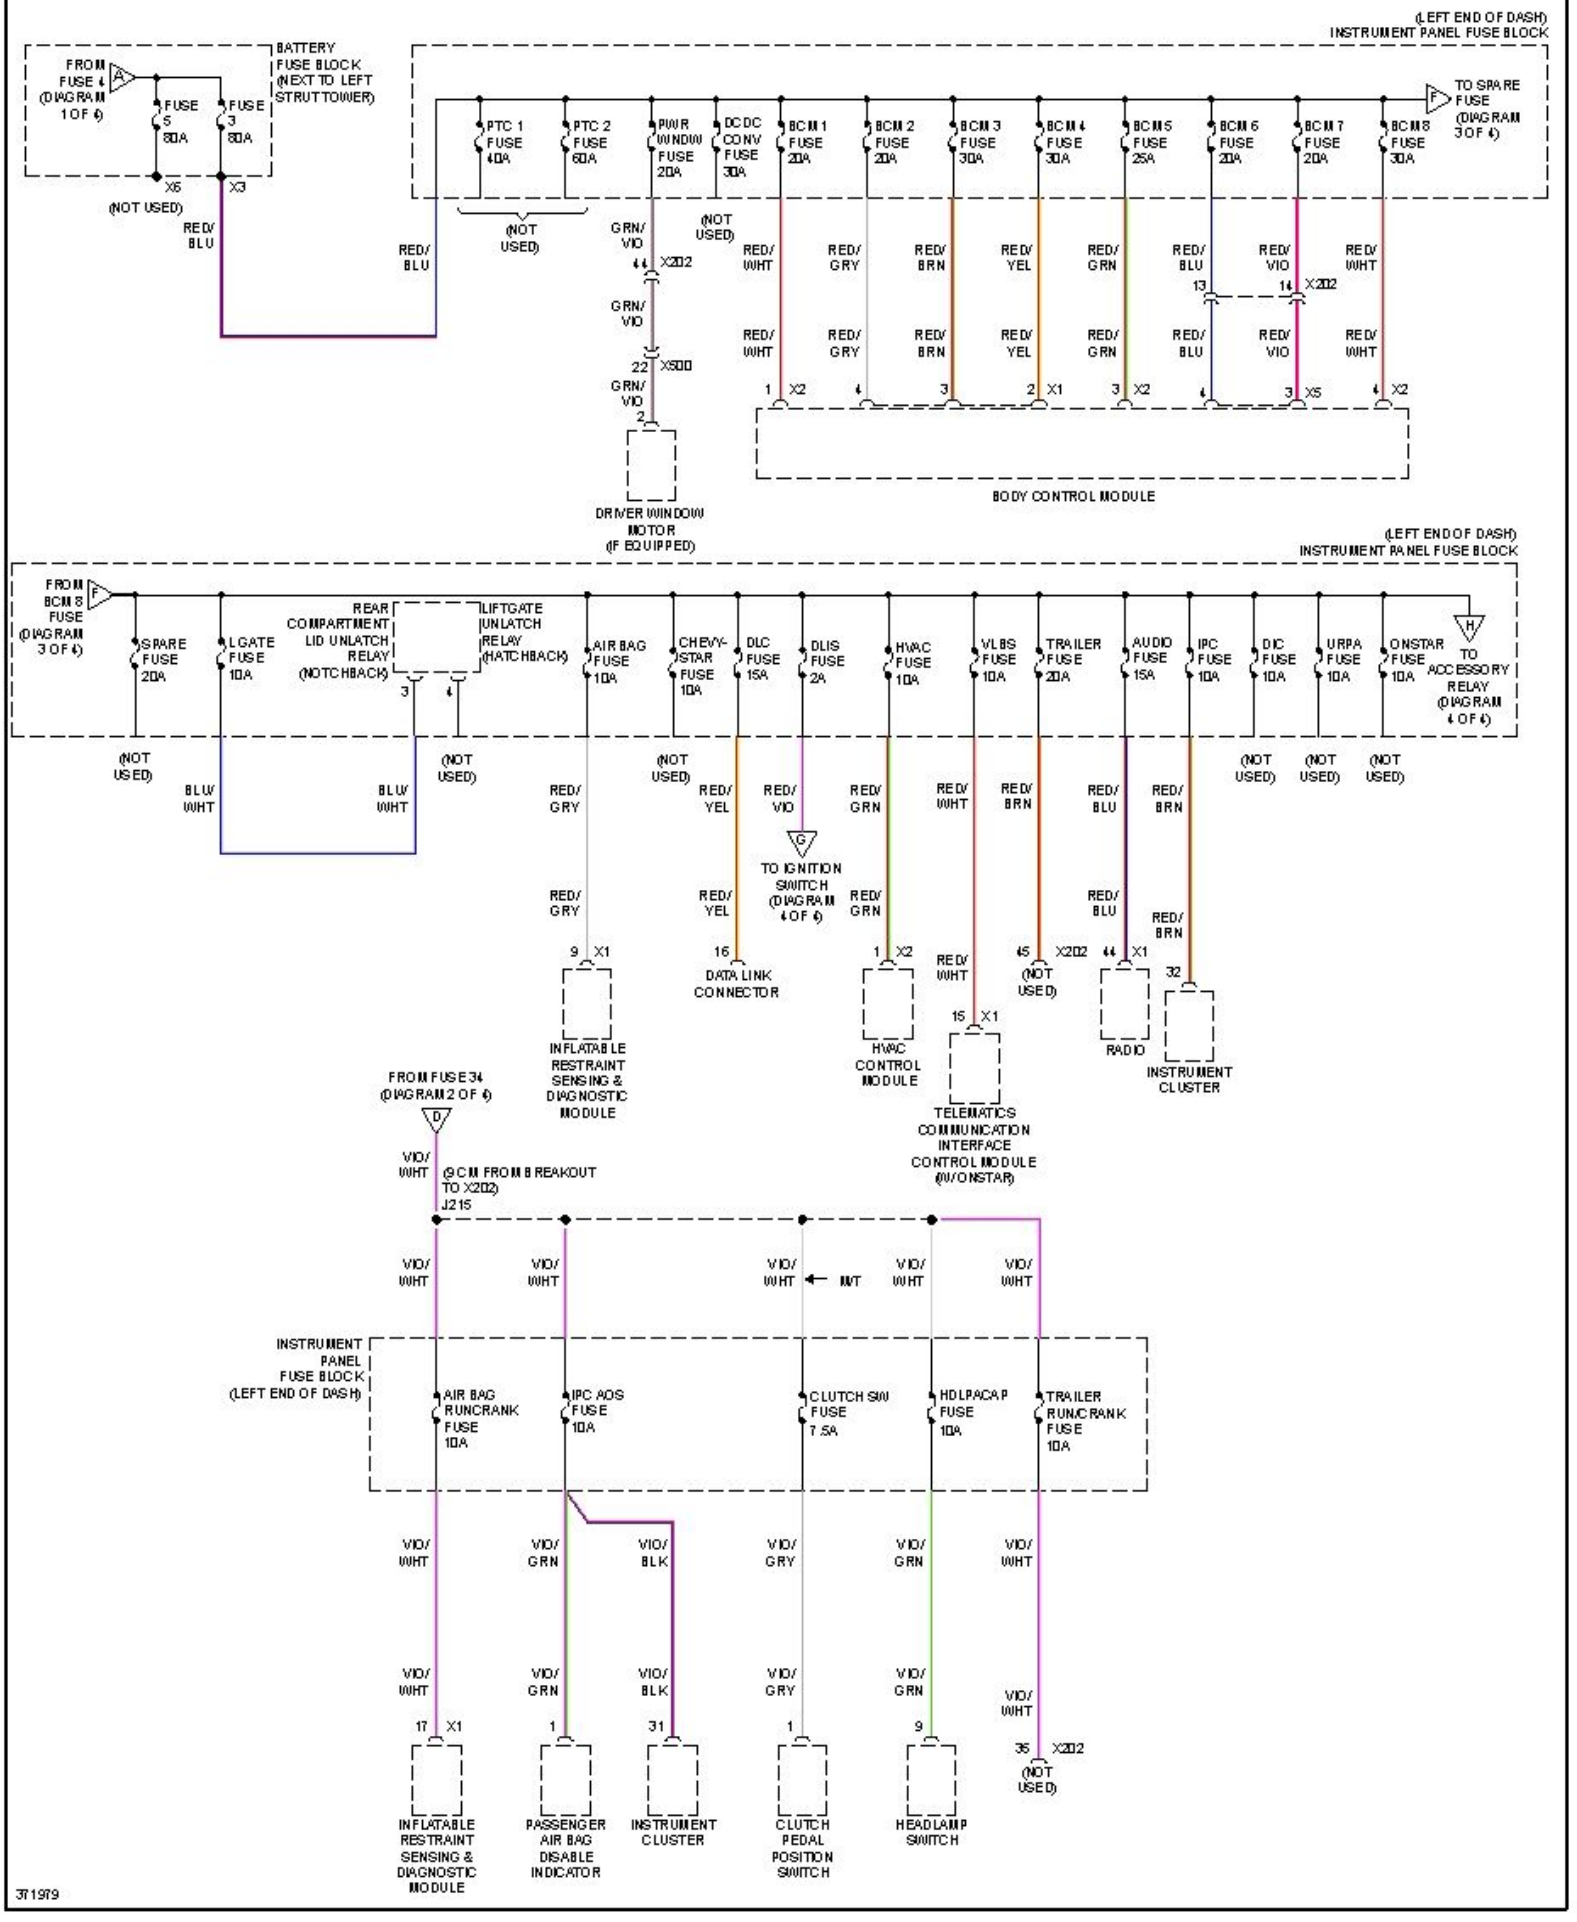
(LEFT END OF DASH)
INSTRUMENT PANEL FUSE BLOCK
FROM FUSE 4 (DIAGRAM 1 OF 4)
BATTERY FUSE BLOCK (NEXT TO LEFT STRUT TOWER)
FUSE 5 80A
FUSE 3 80A
X6
(NOT USED)
X3
RED/ BLU
PTC 1 FUSE 40A
PTC 2 FUSE 60A
PWR WINDW FUSE 20A
DC DC CONV FUSE 30A
BCM 1 FUSE 20A
BCM 2 FUSE 20A
BCM 3 FUSE 30A
BCM 4 FUSE 30A
BCM 5 FUSE 25A
BCM 6 FUSE 20A
BCM 7 FUSE 20A
BCM 8 FUSE 30A
TO SPARE FUSE (DIAGRAM 3 OF 4)
(NOT USED)
GRN/ VIO
X202
22
X500
2
DRIVER WINDOW MOTOR (IF EQUIPPED)
RED/ WHT
RED/ GRY
RED/ BRN
RED/ YEL
RED/ GRN
RED/ BLU
RED/ VIO
13
14
1
X2
4
3
2
X1
X5
BODY CONTROL MODULE
(LEFT END OF DASH)
INSTRUMENT PANEL FUSE BLOCK
FROM BCM 8 FUSE (DIAGRAM 3 OF 4)
SPARE FUSE 20A
LGATE FUSE 10A
REAR COMPARTMENT LID UNLATCH RELAY (NOTCHBACK)
LIFTGATE UNLATCH RELAY (HATCHBACK)
AIR BAG FUSE 10A
CHEVY-STAR FUSE 10A
DLC FUSE 15A
DLIS FUSE 2A
HVAC FUSE 10A
VLBS FUSE 10A
TRAILER FUSE 20A
AUDIO FUSE 15A
IPC FUSE 10A
DIC FUSE 10A
URPA FUSE 10A
ONSTAR FUSE 10A
TO ACCESSORY RELAY (DIAGRAM 4 OF 4)
(NOT USED)
BLU/ WHT
RED/ GRY
RED/ YEL
RED/ VIO
RED/ GRN
RED/ WHT
RED/ BRN
RED/ BLU
9
X1
16
1
X2
15
45
X202
44
32
INFLATABLE RESTRAINT SENSING & DIAGNOSTIC MODULE
DATA LINK CONNECTOR
TO IGNITION SWITCH (DIAGRAM 4 OF 4)
HVAC CONTROL MODULE
TELEMATICS COMMUNICATION INTERFACE CONTROL MODULE (W/ ONSTAR)
RADIO
INSTRUMENT CLUSTER
FROM FUSE 34 (DIAGRAM 2 OF 4)
VIO/ WHT
(BCM FROM B REAKOUT TO X202)
J215
M/T
INSTRUMENT PANEL FUSE BLOCK (LEFT END OF DASH)
AIR BAG RUN/CRANK FUSE 10A
IPC ACS FUSE 10A
CLUTCH SW FUSE 7.5A
HDLP/ACAP FUSE 10A
TRAILER RUN/CRANK FUSE 10A
VIO/ GRN
VIO/ BLK
VIO/ GRY
17
31
35
INFLATABLE RESTRAINT SENSING & DIAGNOSTIC MODULE
PASSENGER AIR BAG DISABLE INDICATOR
INSTRUMENT CLUSTER
CLUTCH PEDAL POSITION SWITCH
HEADLAMP SWITCH
371979