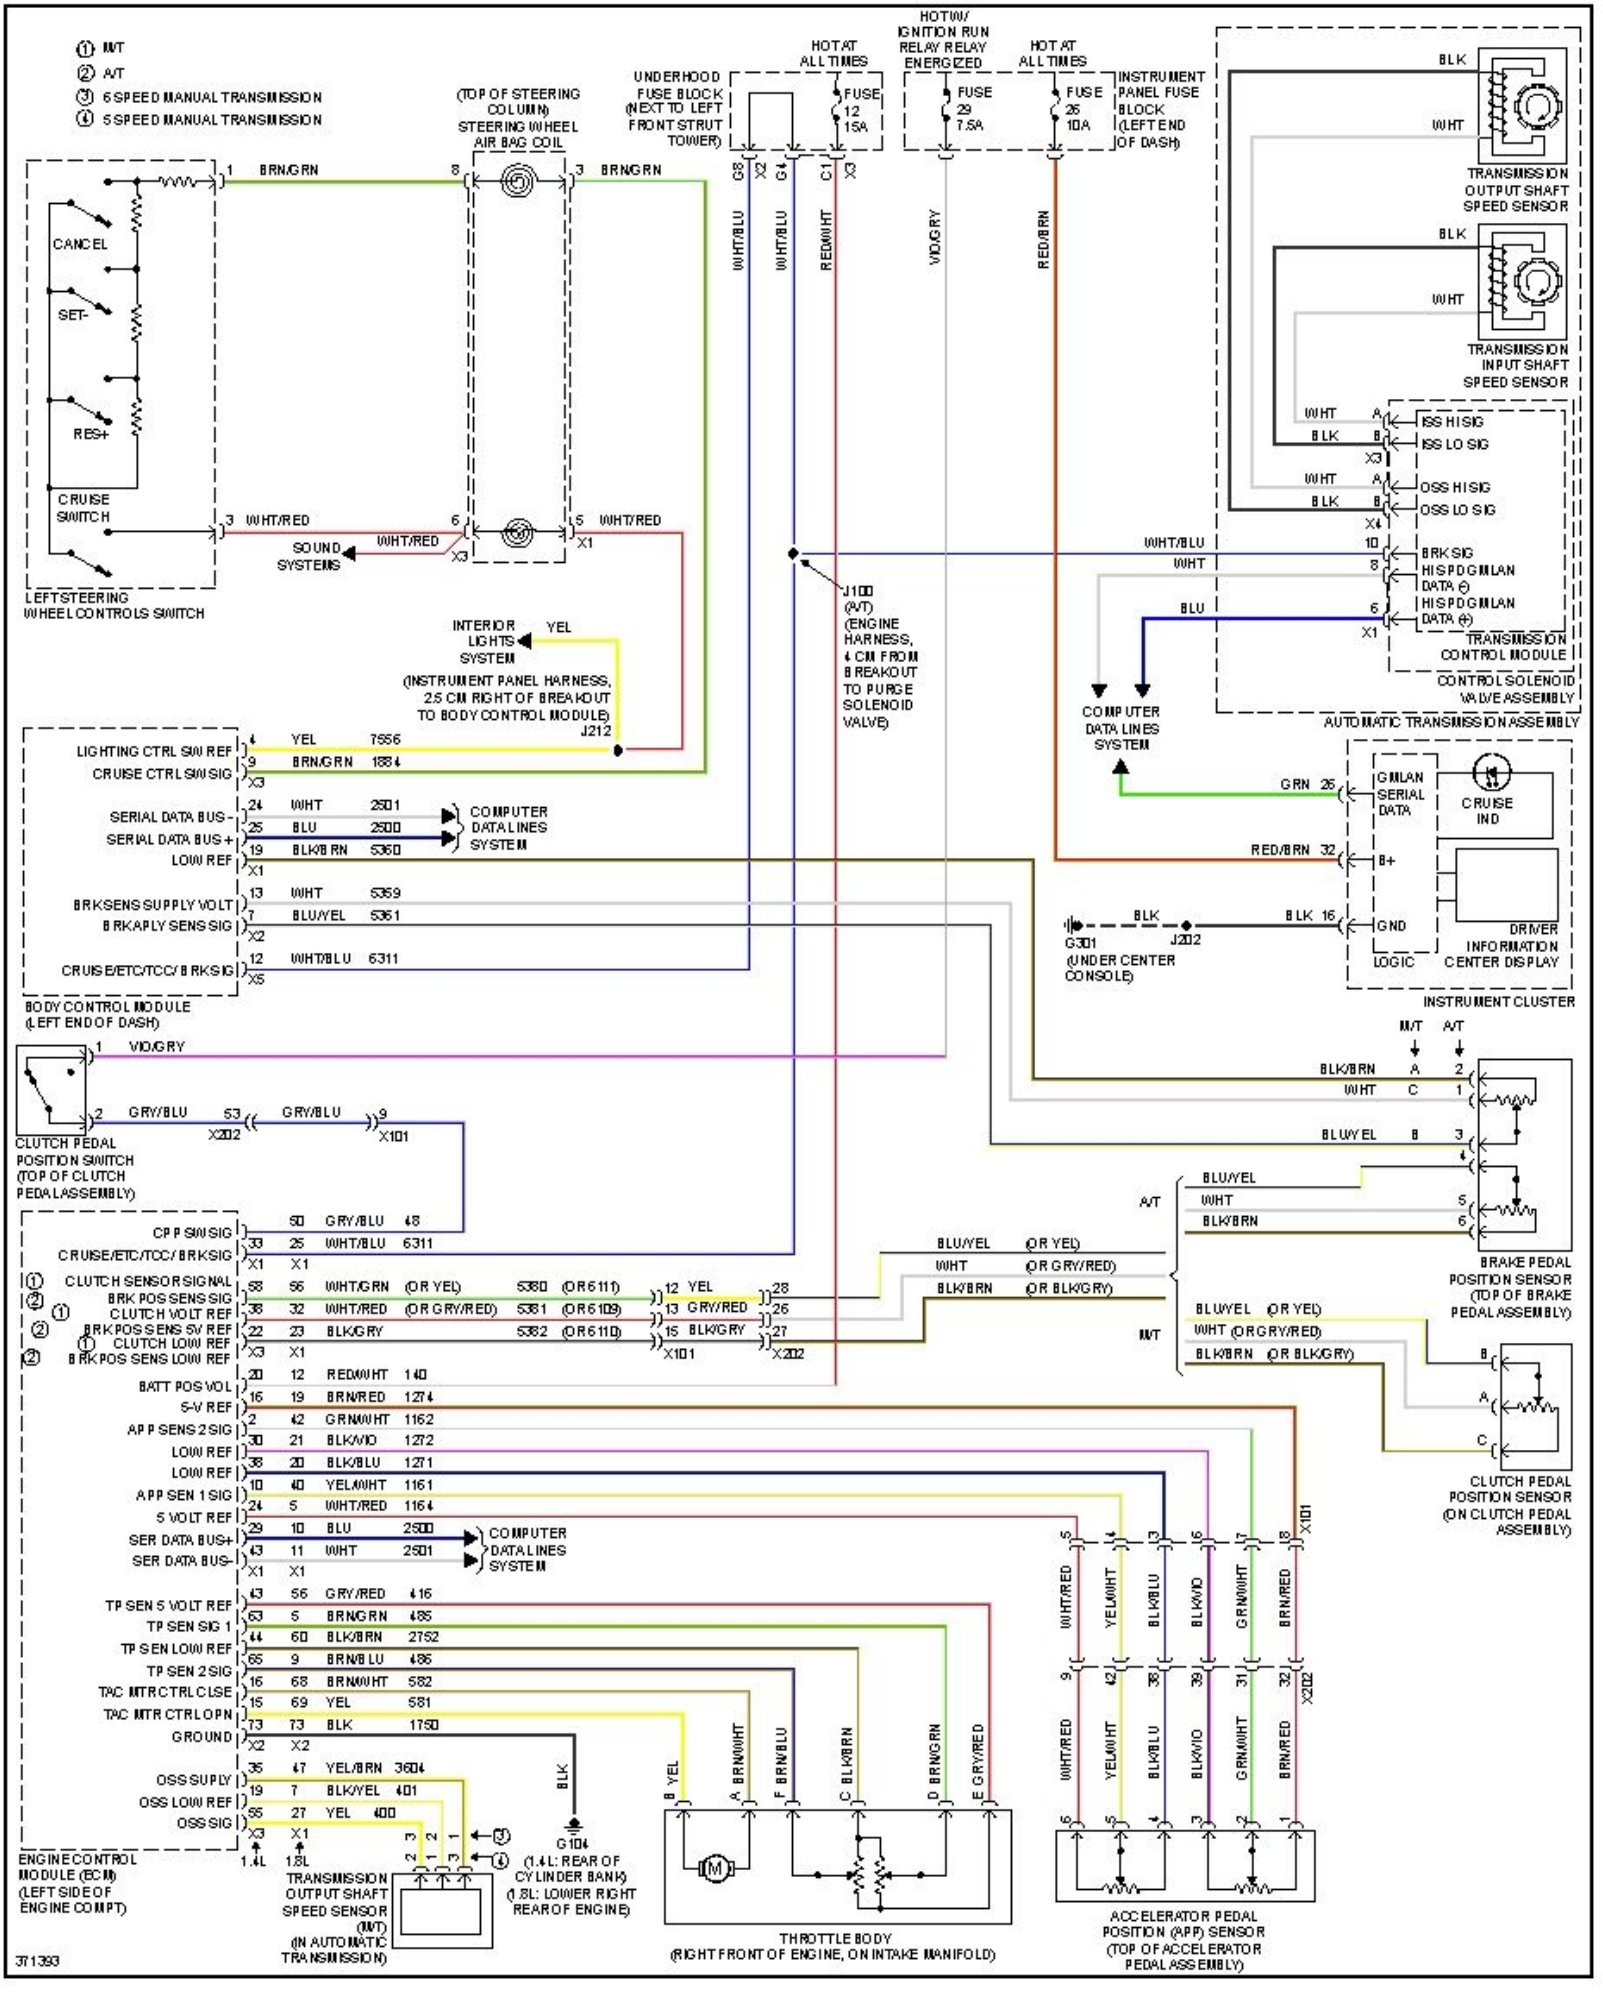
① M/T
② A/T
③ 6 SPEED MANUAL TRANSMISSION
④ 5 SPEED MANUAL TRANSMISSION
(TOP OF STEERING COLUMN)
STEERING WHEEL AIR BAG COIL
UNDER HOOD FUSE BLOCK (NEXT TO LEFT FRONT STRUT TOWER)
HOT AT ALL TIMES
HOT W/ IGNITION RUN RELAY RELAY ENERGIZED
HOT AT ALL TIMES
INSTRUMENT PANEL FUSE BLOCK (LEFT END OF DASH)
FUSE 12 15A
FUSE 29 7.5A
FUSE 26 10A
CANCEL
SET-
RES+
CRUISE SWITCH
LEFT STEERING WHEEL CONTROLS SWITCH
BRN/GRN
WHT/RED
SOUND SYSTEMS
INTERIOR LIGHTS SYSTEM
YEL
(INSTRUMENT PANEL HARNESS, 2.5 CM RIGHT OF BREAKOUT TO BODY CONTROL MODULE)
J212
J100 (A/T) (ENGINE HARNESS, 4 CM FROM BREAKOUT TO PURGE SOLENOID VALVE)
WHT/BLU
WHT/BLU
RED/WHT
VIO/GRY
RED/BRN
BLK
TRANSMISSION OUTPUT SHAFT SPEED SENSOR
TRANSMISSION INPUT SHAFT SPEED SENSOR
ISS HI SIG
ISS LO SIG
OSS HI SIG
OSS LO SIG
BRK SIG
HISPD GMLAN DATA ⊖
HISPD GMLAN DATA ⊕
TRANSMISSION CONTROL MODULE
CONTROL SOLENOID VALVE ASSEMBLY
AUTOMATIC TRANSMISSION ASSEMBLY
COMPUTER DATA LINES SYSTEM
GMLAN SERIAL DATA
CRUISE IND
DRIVER INFORMATION CENTER DISPLAY
LOGIC
GND
G301 (UNDER CENTER CONSOLE)
J202
INSTRUMENT CLUSTER
BODY CONTROL MODULE (LEFT END OF DASH)
LIGHTING CTRL SW REF
CRUISE CTRL SW SIG
SERIAL DATA BUS-
SERIAL DATA BUS+
LOW REF
BRK SENS SUPPLY VOLT
BRK APLY SENS SIG
CRUISE/ETC/TCC/BRK SIG
CLUTCH PEDAL POSITION SWITCH (TOP OF CLUTCH PEDAL ASSEMBLY)
GRY/BLU
X202
X101
M/T
A/T
BLK/BRN
WHT
BLU/YEL
BRAKE PEDAL POSITION SENSOR (TOP OF BRAKE PEDAL ASSEMBLY)
CLUTCH PEDAL POSITION SENSOR (ON CLUTCH PEDAL ASSEMBLY)
CPP SW SIG
CRUISE/ETC/TCC/BRK SIG
CLUTCH SENSOR SIGNAL
BRK POS SENS SIG
CLUTCH VOLT REF
BRK POS SENS 5V REF
CLUTCH LOW REF
BRK POS SENS LOW REF
BATT POS VOL
5-V REF
APP SENS 2 SIG
LOW REF
LOW REF
APP SEN 1 SIG
5 VOLT REF
SER DATA BUS+
SER DATA BUS-
TP SEN 5 VOLT REF
TP SEN SIG 1
TP SEN LOW REF
TP SEN 2 SIG
TAC MTR CTRL CLSE
TAC MTR CTRL OPN
GROUND
OSS SUPLY
OSS LOW REF
OSS SIG
COMPUTER DATA LINES SYSTEM
ENGINE CONTROL MODULE (ECM) (LEFT SIDE OF ENGINE COMPT)
1.4L
1.8L
TRANSMISSION OUTPUT SHAFT SPEED SENSOR (M/T) (IN AUTOMATIC TRANSMISSION)
G104 (1.4L: REAR OF CYLINDER BANK) (1.8L: LOWER RIGHT REAR OF ENGINE)
THROTTLE BODY (RIGHT FRONT OF ENGINE, ON INTAKE MANIFOLD)
ACCELERATOR PEDAL POSITION (APP) SENSOR (TOP OF ACCELERATOR PEDAL ASSEMBLY)
371393